



	spare part no	
①	GRILL	
③	HEAT RADIATION COVER 3	
⑤	RADIATION ELEMENT	369007
⑦	THERMOELEMENT T4	362601
⑨	FASTENING PLATE FOR GLOW PLUG	
⑪	COVER OF THE BURNER HOUSING	
⑬	WIRE SET GLOW PRIMER PLUG	363052
⑮	OVERFLOW CASING	
⑰	BACK COVER	
⑲	OVERHEAT THERMOSTAT	362406
⑳	HEAT INSULATION 90x110x9 mm	364018
㉑	FUEL PUMP, FC 2	367502
㉓	COVER FOR HEAT INSULATION	
㉕	POWER CONNECTOR, SUPPORT PLATE	362307
㉗	GASKET FOR THERMOELEMENT T4	364015
㉙	FUEL NOZZLE TUBE	367308
㉛	BOTTOM MAT ø 85 mm	364023
㉝	POWER CONNECTOR, FEMALE	362304
㉟	CONTROL UNIT, XPS2	361056
㊱	HEAT EXCHANGER	
㊳	RADIATION ELEMENT	369022
㊵	FASTENING PLATE FOR THERMOELEMENT T4	
㊷	FUEL NOZZLE TUBE	367313
㊹	FASTENING PLATE FOR GLOW PLUG	
㊻	HEAT RADIATION COVER 3	
㊽	GASKET FOR COMBUSTION BLOWER	
㊿	OVERFLOW CUP	
55	HEAT INSULATION 152x148x9 mm, hole Ø 7 mm	
57	HEAT INSULATION 86x144x9 mm	
59	OVERFLOW PIPE	
61	BOTTOM PLATE	
63	REFLECTOR PLATE	
65	HEAT RADIATION COVER 4	

	spare part no	
2	OBSERVATION GLASS	364013
4	BURNER CYLINDER ASSEMBLY	369024
6	GASKET SET	364021
8	FASTENING PLATE FOR THERMOELEMENT T4	
10	GLOW PLUG	362502
12	GROUNDING WIRE	363047
14	COMBUSTION BLOWER	365301
16	FUEL HOSE BAJON. CONNECTOR / MALE	367116
18	HEAT RADIATION COVER 2	
20	HEAT RADIATION COVER 1	
22	FUEL PUMP CONNECTOR	367101
24	FUEL PUMP CONNECTOR BAJON.	367102
26	HEAT INSULATION 189x118x9 mm	364019
28	GASKET FOR GLOW PLUG, 1.5 mm	364109
30	GASKET FOR COMBUSTION BLOWER	
32	SPRING	
34	BASE	
36	FUEL HOSE BAJON. CONNECTOR CHASSIS	367118
38	GRILL	
40	HEAT RADIATION COVER 2	
42	BURNER CYLINDER ASSEMBLY	369010
44	BOTTOM MAT ø 105 mm	364024
46	GASKET FOR GLOW PLUG, 3.0mm	364130
48	HEAT RADIATION COVER 1	
50	BACK COVER	
52	COVER OF THE BURNER HOUSING	
54	GASKET SET	364022
56	HEAT INSULATION 80x140x9 mm	
58	HEAT INSULATION 87x155x9 mm	
60	OVERFLOW CASING	
62	HEAT INSULATION 135x146x9 mm	
64	HEAT EXCHANGER	