




1904

Montering Sjoa fast felt

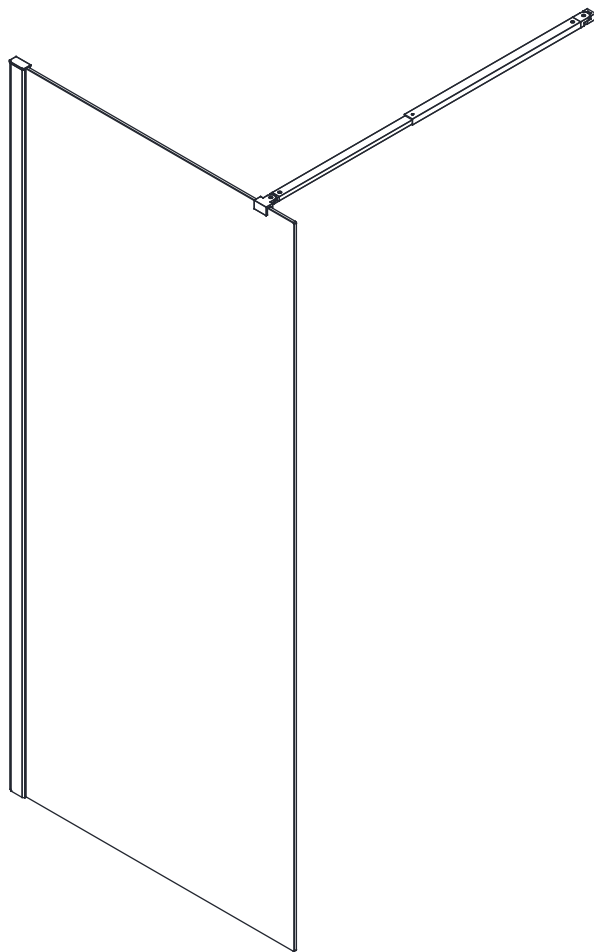



1.

Not included

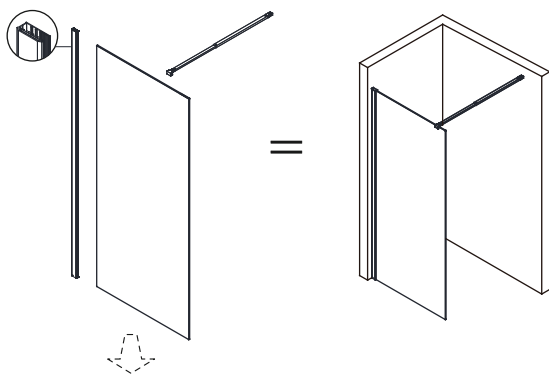
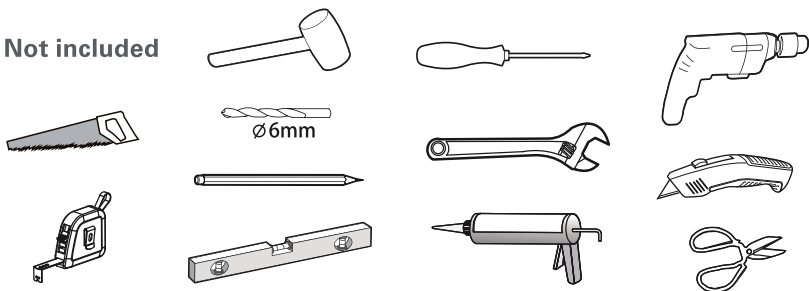


A1		x5
B		x5
C1		x1
C2		x1
E		x1
K		x1
Z		x1
Z1		x1
Z3		x1
L		x1
N		x1


2.

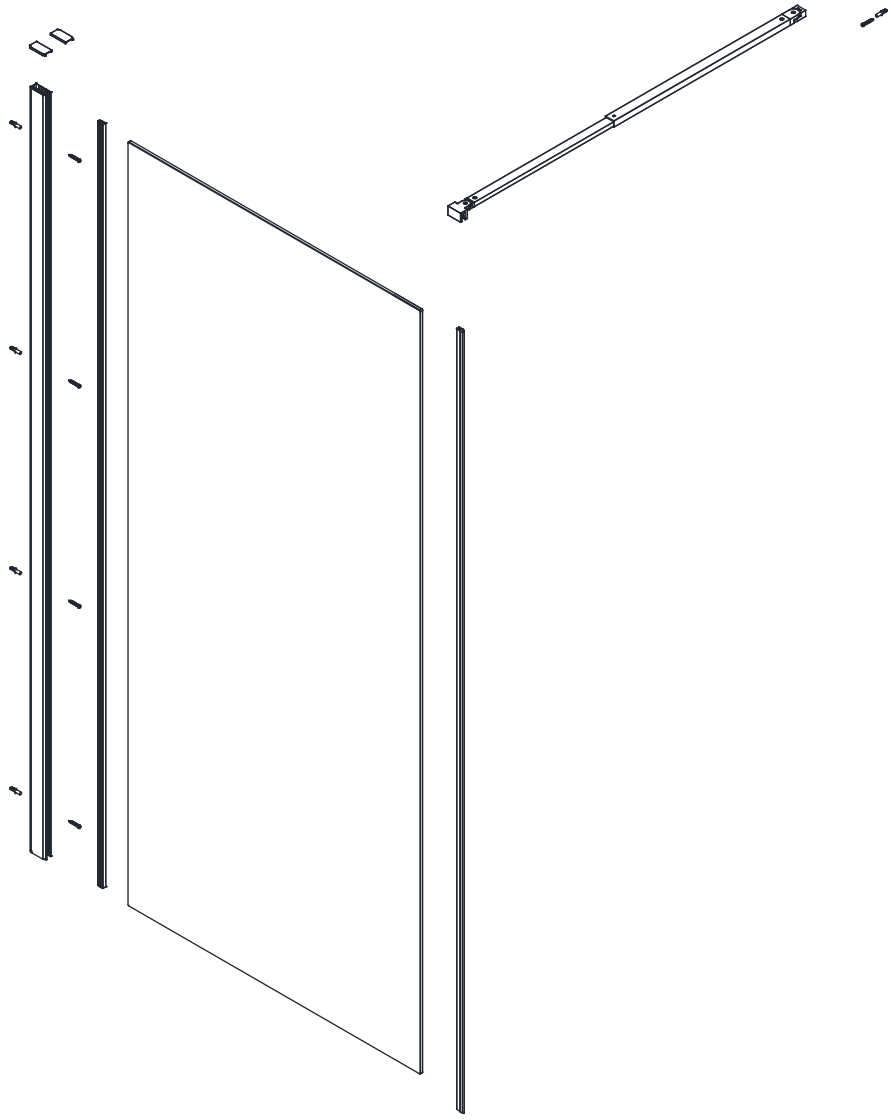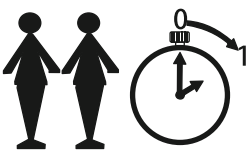



3.

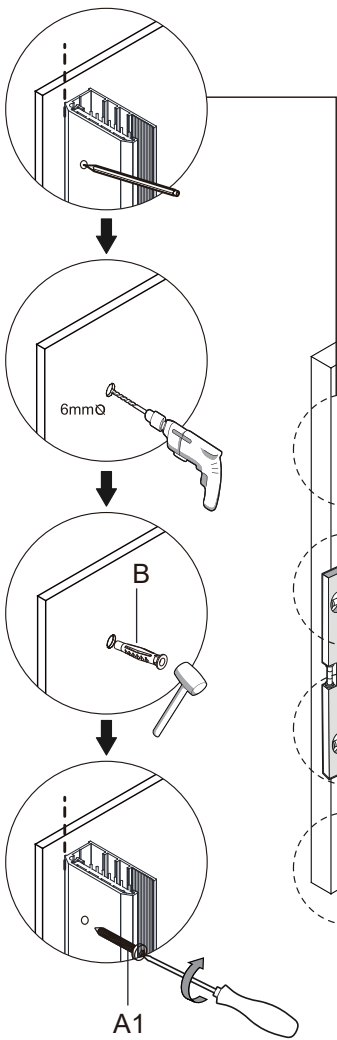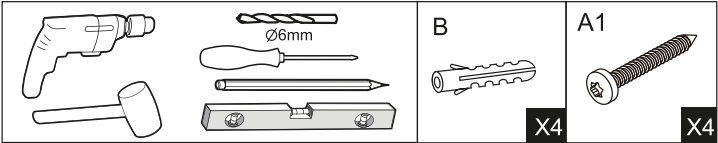



	Max:X
900X1921mm	988mm
1000X1921mm	988mm
1200X1921mm	988mm

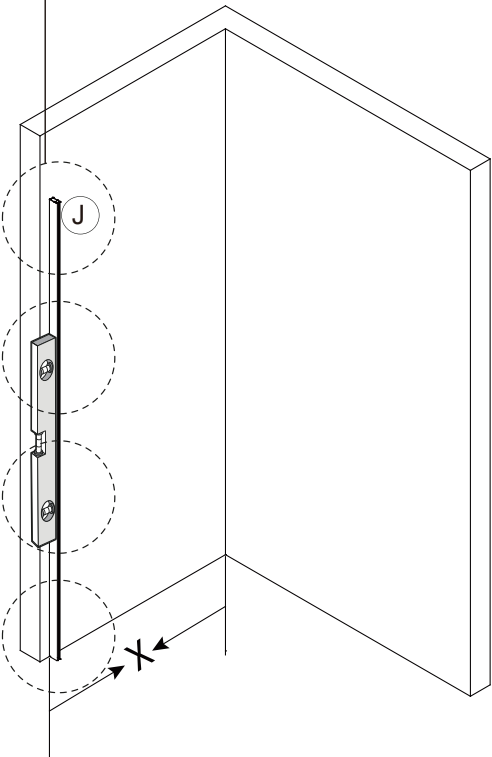



4.

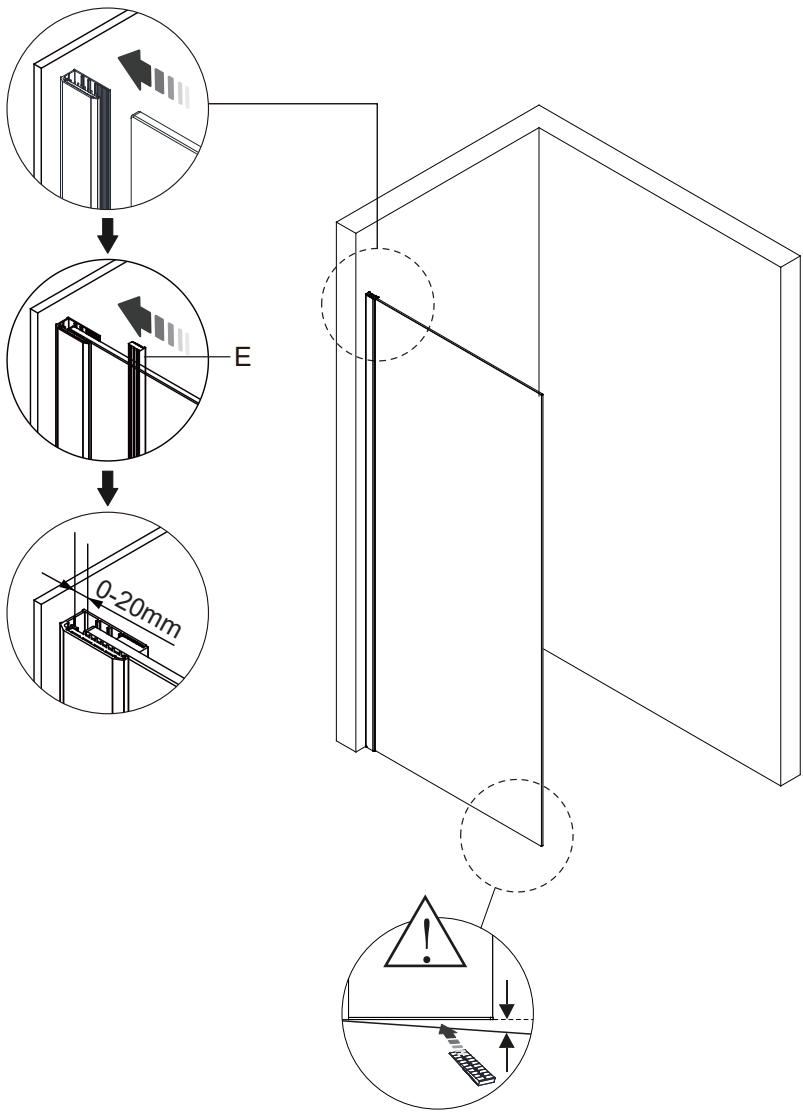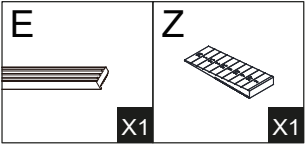



5.

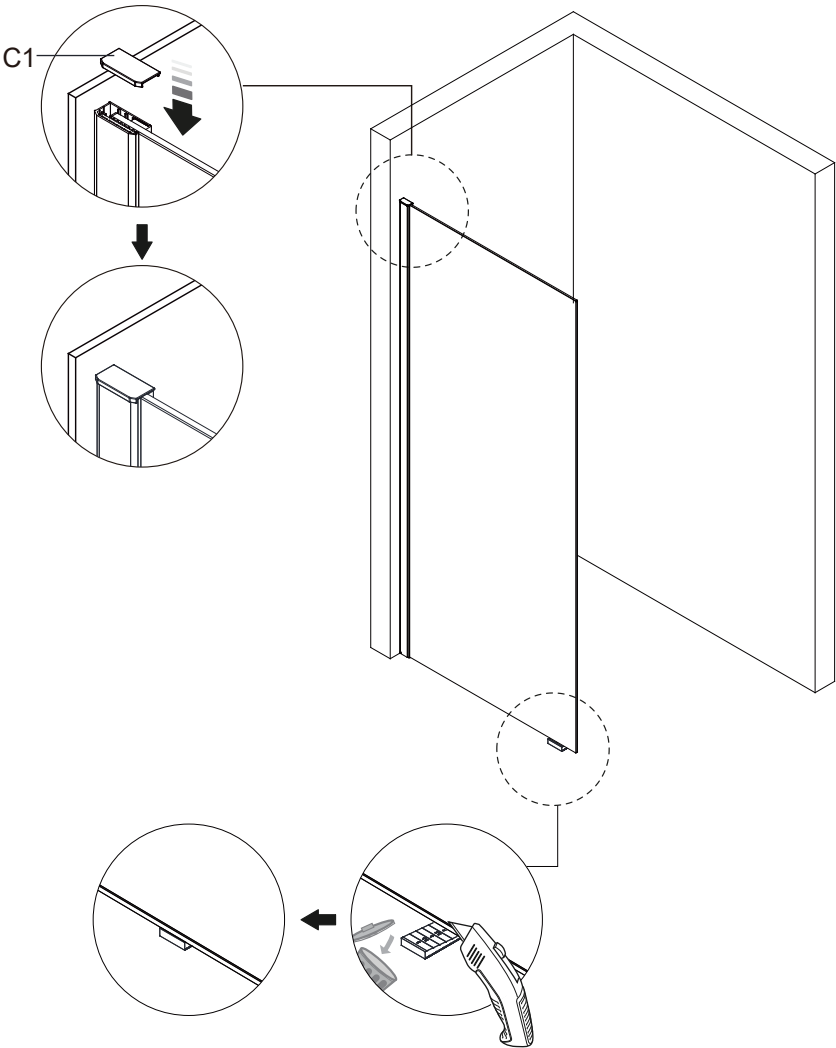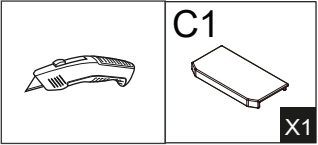



6.

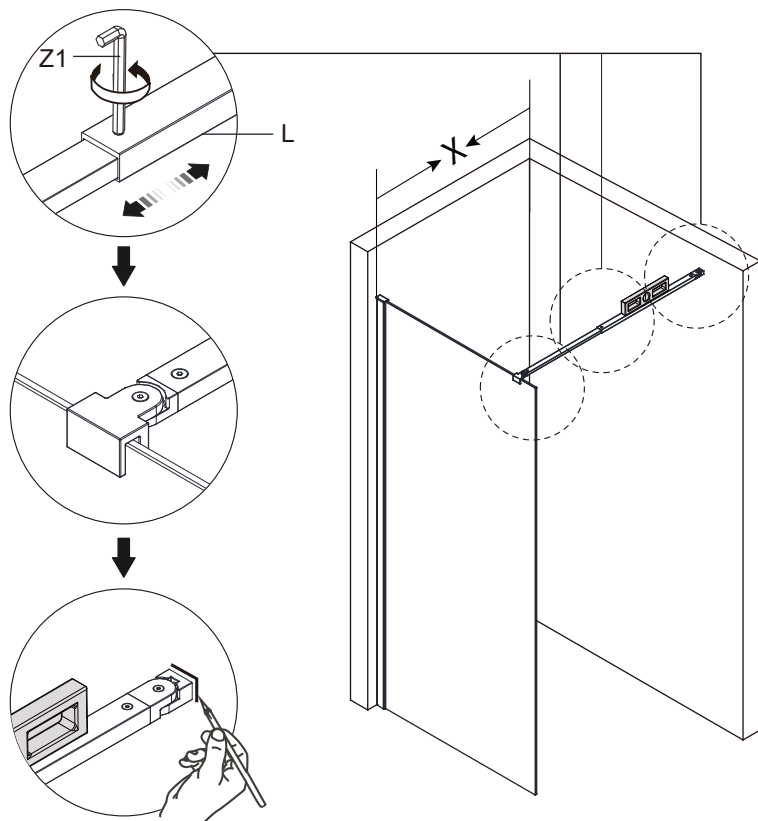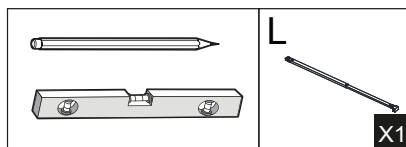

7.

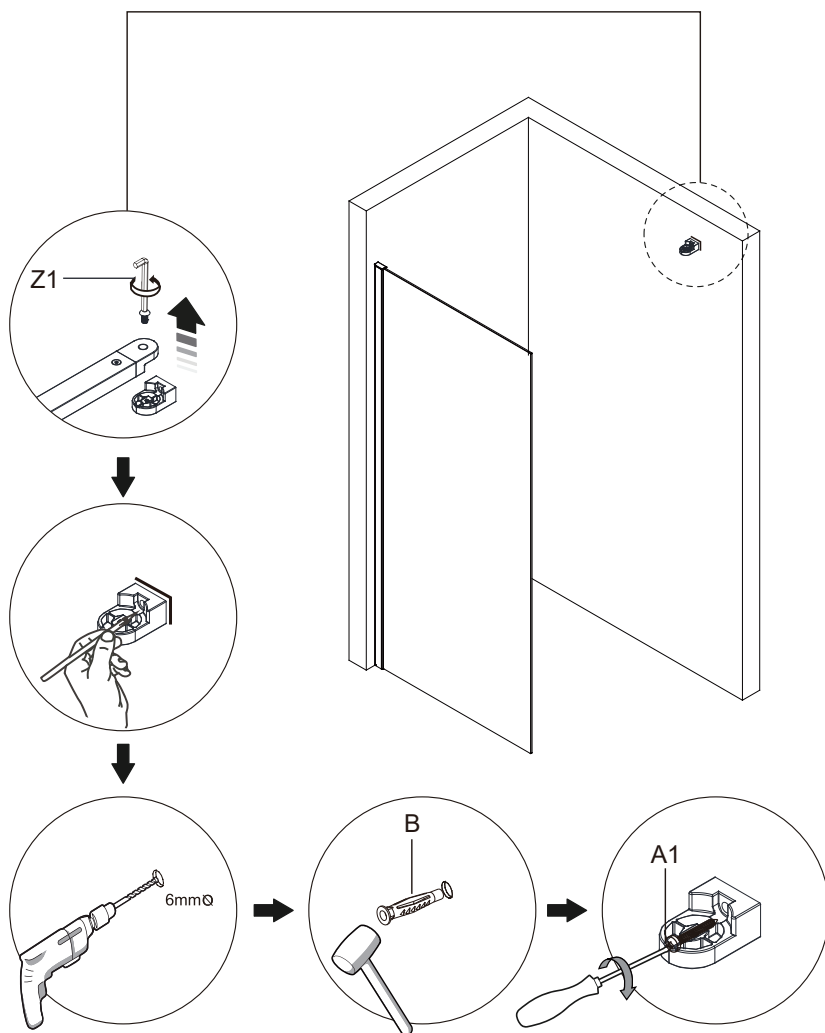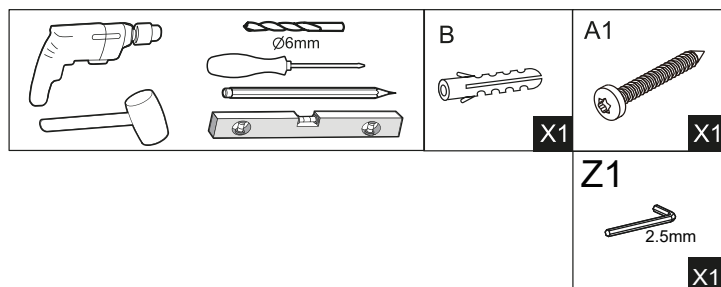

8.

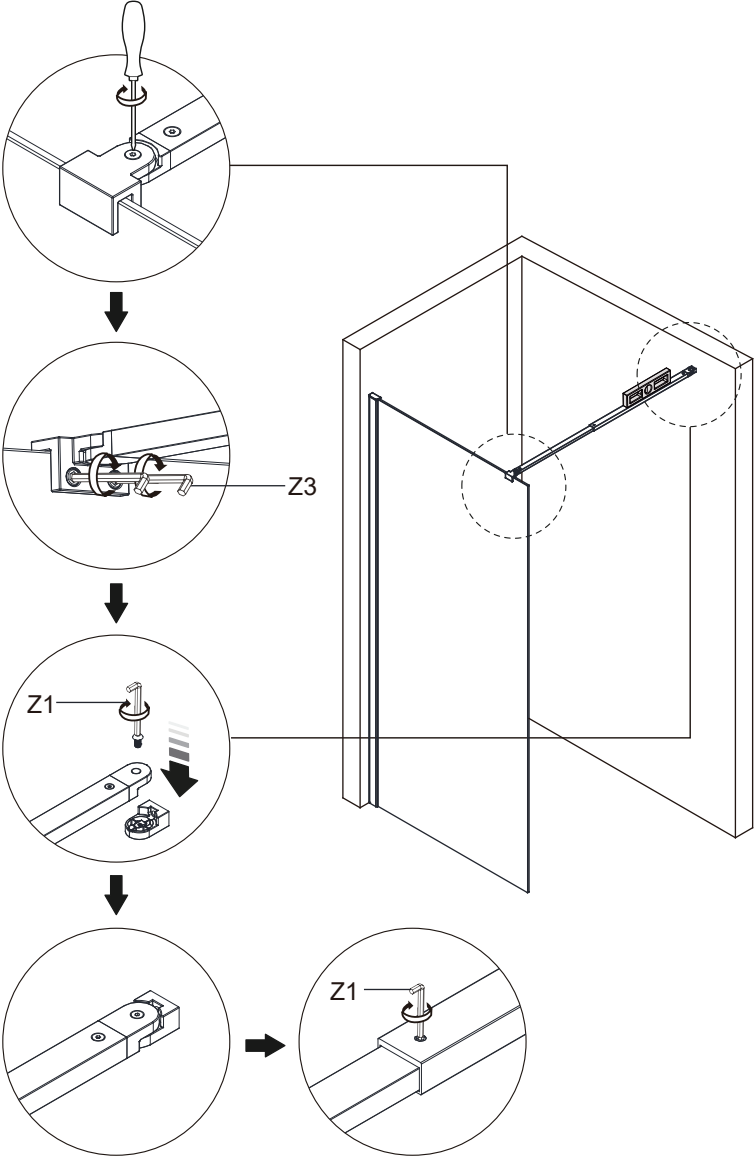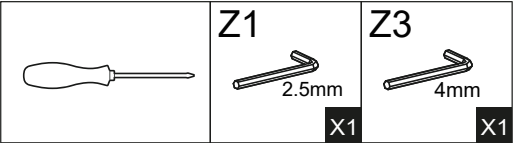

9.

